




FIXED MOUNT INSTRUCTIONS FOR ROCKBRIDGE SHUTTERS

Mounting hardware included per pair of shutters:

- 4 Lexan "L" brackets – same width as shutters – additional brackets will be included at 2" wide if shutters are over 55" in height
- 8 stainless steel 1" screws (12 screws if shutters exceed 55" in height)
- 8 stainless steel 1 ½" screws (12 screws if shutters exceed 55" in height)

Mounting instructions:

- 1) Determine proper position for mounting brackets, using above diagram. (Part-A)
- 2) Drill holes in house exterior for 1 ½" screws included in packet (if masonry, drill ¼" to insert plastic anchors).
- 3) Measure height of shutter and drill holes for top brackets and screw brackets to house exterior.
- 4) If shutter height exceeds 55", additional small brackets are included to mount as shown in center. Arch top shutters will also include an additional small bracket to secure the arch, to be installed mid-point of arch. (Part-B)
- 5) Place shutter onto lip of bracket and push back as far as possible. Mark shutter(s) to pre-drill holes into shutter from top & bottom of mounting brackets. Use a 5/32" bit for this step. *TIP: do not insert screws without pre-drilling, this can cause the Rockbridge material to split.*
- 6) Insert 1" screws through bracket and into shutter. Tighten screws snugly – be careful to not over-tighten.

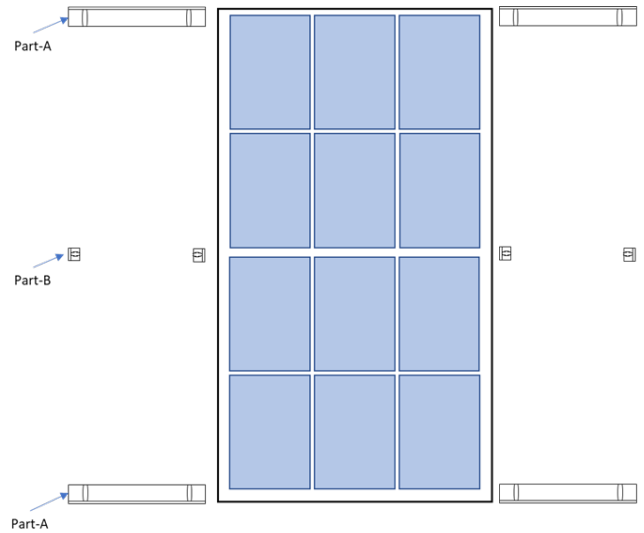

Shutters By Design is not responsible for damages as a result of following the above instructions.

Shutters By Design will not be held liable for any damage or defects resulting from modification or repairs done by the customer. Shutters By Design will not pay for any painting or re-installation of our shutters due to modifications, repairs or replacement.